







SS32 1250/1600/2500/3150

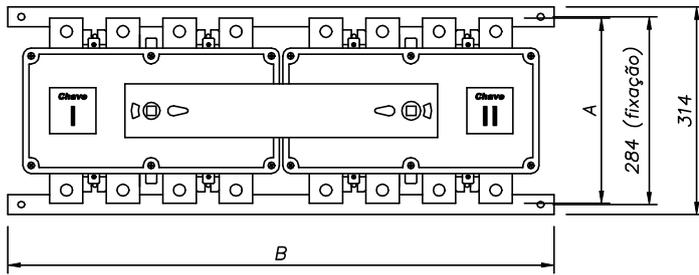

Disposição horizontal

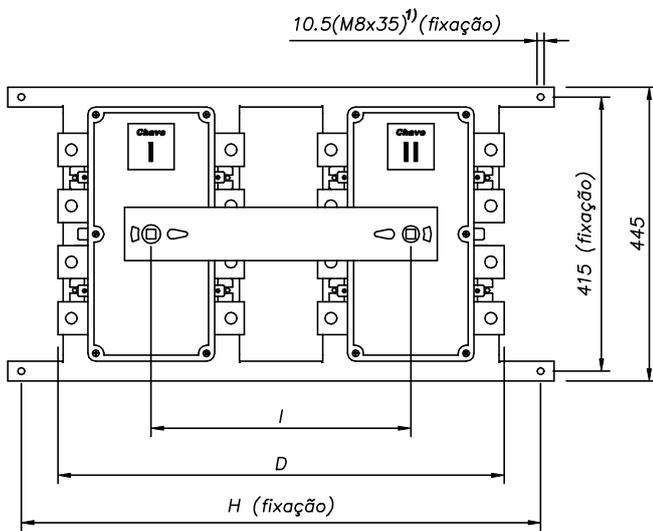

Disposição vertical

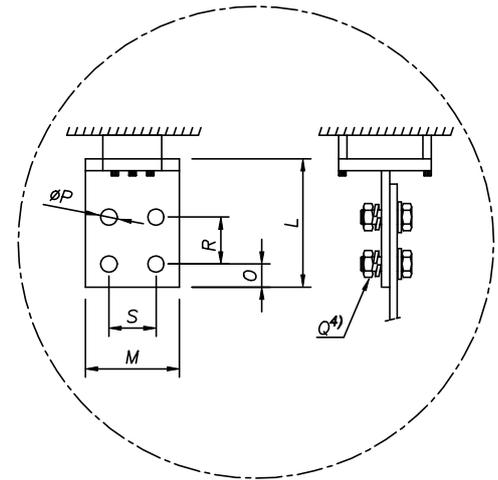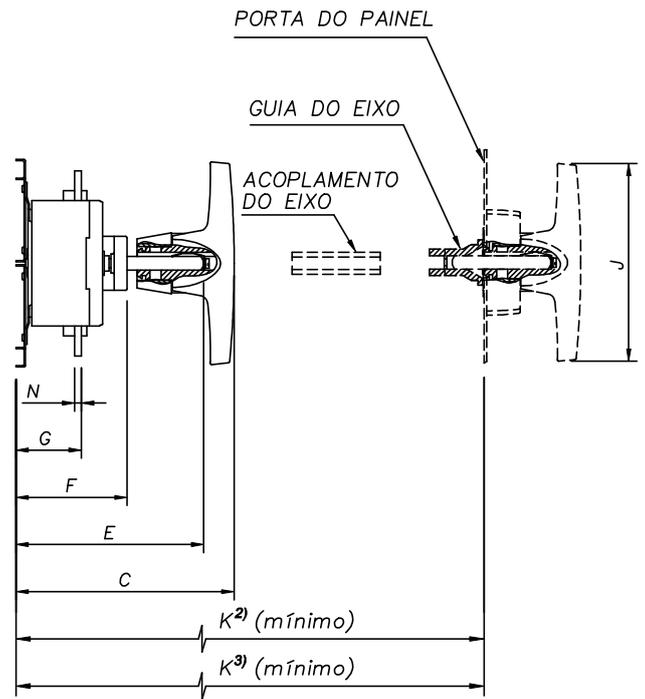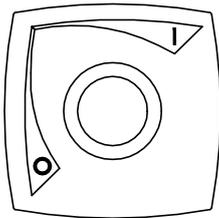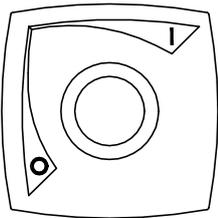

Comutadora	A	B	C	D	E	F	G	H	I	J	K ²⁾
SS32 1250	280	820	255	670	220	167	98	780	390	330	284
SS32 1600	360	820	255	750	220	167	98	780	390	330	284
SS32 2500	450	885	395	905	354	289	157	845	455	450	378
SS32 3150	450	885	395	905	354	289	157	845	455	450	378

Comutadora	K ³⁾	L	M	N	O	P	Q ⁴⁾	R	S
SS32 1250	327	50	50	10	25	18	(1x) M16x50	—	—
SS32 1600	327	85	50	10	20	14	(2x) M12x50	40	—
SS32 2500	421	100	80	10	20	14	(4x) M12x60	40	40
SS32 3150	421	100	80	10	20	14	(4x) M12x60	40	40

- 1) PARAFUSOS PARA FIXAÇÃO FORNECIDOS COM A CHAVE
- 2) DISTÂNCIA MÍNIMA COM ACIONAMENTO EXTERNO DIRETO NO EIXO DA CHAVE
- 3) DISTÂNCIA MÍNIMA COM ACIONAMENTO EXTERNO + EIXO PROLONGADOR
- 4) TORQUE INDICADO PARA OS PARAFUSOS DE CONEXÃO VIDE PÁGINA 21